

## Setting of MP3 Controller



### 1 How to Set Coin Numbers (Pricing)

- 1.1 Press and hold the 'Audit/Setting' button until you hear the voice prompt of "Coin Setting"
- 1.2 Press "+" or "-" to increase or decrease coin number.

### 2 How to Choose Analog Sounds

- 2.1 Press and hold the 'Audit/Setting' button until you hear the voice prompt "Analog Sound Setting"
- 2.2 Press "+" or "-" to choose analog sounds you like.

### 3 How to Turn On/Off LED Flashing Lights (if has)

- 3.1 Press and hold the 'Audit/Setting' button until you hear the voice prompt "Flashing Lights Setting"
- 3.2 Press "+" or "-" to turn on/off the lights.

### 4 How to Adjust Music Volume

- 4.1 Press and Release the "+" button to increase the volume
- 4.2 Press and Release the "-" button to decrease the volume.

### 5 How to Adjust Play Time

- 5.1 Press and Hold "+" button until you hear the voice prompt of "time x.x minutes", and just repeat the step if you'd like to add the time more.
- 5.2 Press and Hold "-" button until you hear the voice prompt of "time x.x minutes", and repeat the step if you'd like to reduce the time more.

### 6 Audit Function

Press and Release the "Audit/Setting" button repeatedly, the present "music volume", "timing", "pricing" and "coin counts" will be sequently voice announced in English.