



# WANI WANI

## Manual

Read carefully before use

# CONTENT

|  |   |
|--|---|
| 1. Brief .....                           | 1 |
| 2. Caution .....                         | 1 |
| 3. Accessories .....                     | 1 |
| 4. Technical parameter.....              | 2 |
| 5. Installation of ticket dispenser..... | 2 |
| 6. Installation and operation.....       | 3 |
| 7. Trouble shooting .....                | 4 |
| 8. Tickets adjustment.....               | 5 |
| 9. DIP of main board .....               | 5 |

## RM052 WANI-WANI

---

### 1. BRIEF

WANI WANI is one of the carnival items for indoor use. Players Insert coins then play. Try to hit the crocodiles which come out then get 1 point for each one. Get the tickets according to the total points. Its character: easy to play, player just masters the simple skills. It is so funny that fit for different ages to play.

### 2. CAUTION

- Check if the plug of electrical source and wires are intact before switching the power on. Check if the voltage fit for the machine.
- The voltage of electrical source should range from 200V to 240V.
- Switch the power off before the staffs are off duty.
- The small black switch of ticket dispenser has been adjusted well. Do not touch it.
- Switch the power off before inspecting the machine.
- Only qualified personnel to inspect the machine.
- Keep the machine clean.
- Keep the environment clean and dry. Keep it away from corrosive gas.
- Press the reset button after adjusting the DIP switch on main board.
- Clear JP button: Press this button during the course of countdown of resetting or powering up. All the values will be either default or zero.
- Clear alarm for no ticket: When tickets run out or ticket jams, the machine will raise alarm. If you want to replenish the owed tickets after the tickets has run out, install the tickets and press this button. The alarm bell ring will be over.

### 3. ACCESSORIE

| Name          | Qty | Remarks |
|---------------|-----|---------|
| Manual        | 1   |         |
| (6*30)3A Fuse | 2   |         |
| (6*30)5A Fuse | 2   |         |
| (6*30)8A Fuse | 2   |         |

## RM052 WANI-WANI

|                                       |            |  |
|---------------------------------------|------------|--|
| 12V LED lights(red,yellow,green,bule) | 2 for each |  |
| sensor board                          | 3          |  |
| Wire                                  | 1          |  |
| Hammer                                | 1          |  |

### 4. TECHNICAL PARAMETER

Dimension: 880D × 1140W × 1820H (mm)

Weight: 150 kg

Power Supply: AC 220V 50Hz/60Hz

Power: 230W

Play: 1 person

### 5. INSTALLATION OF TICKET DISPENSER

1. Open the window of the ticket dispenser with the key.
2. Put all tickets into the ticket holder with their obverse side up.
3. Put one end of the tickets into the ticket pivot bracket and use the pressing wheel to press them down.
4. Press the micro switch on the left of the circuit board till a ticket comes out from the ticket exit.
5. Lock the window of ticket dispenser.
6. Caution!
  - (1) The tickets can't be put to overlap each other.
  - (2) The two black switches on the circuit board have been adjusted well and can't be touched
  - (3) The direction of the tickets should be the same as the pay out direction. Tickets should be placed according to the exit direction.
  - (4) Do not let the wires and tickets are in contact.

### 6. INSTALLATION AND OPERATION

#### 1)Operation

- (1) The attract mode provides a light and sound display while the game is unattended.

## RM052 WANI-WANI

---

(2) Insert coins, "GAME OVER" lights off, but "START" lights on. The 5 crocodiles come out from the holes then the game starts.

(3) Hitting the crocodiles by a hammer, when hitting one of them then get 1 point, if the player hits them over 40 points in specified time then can have one more time for game, but the speed of the game will faster than the first time and more crocodiles come out, more fun. Do not put your hands on the operation platform to avoid hurting your hands. When the "START" lights off, but "GAME OVER" lights on, then music off, game is over.

(4) The coin per game is adjustable.

### 2)Note:

(1)If adjustment of DIP switch needed, pls press "reset" button and restart the machine.

(2)DIP switch: According to your requirement, it has function for tickets, coins and tickets payout or not, the function reset by pressing the "reset" button and restart the machine.

(3)Refer to the DIP table.

## 7. Trouble shooting

|                       |  |   |
|-----------------------|--|---|
| digital display<br>11 | Error:<br>One or all the crocodiles vibrating with alarming. | Function:<br>1) Replace or fix OPTO-SENSOR.<br>2) Replace PC28(82C55)IC of main board.<br>3)Check the track to see if anything is jammed, or check if OPTO-sensor is well connected, make sure smooth track moving and good OPTO-sensor connection. |
| 22                    | One of the crocodiles vibrating                              | 1) Track jammed or solenoid damaged, clear  |

## RM052 WANI-WANI

|  |                |  |
|--|----------------|--|
|  | with alarming. | or, fix the solenoid.<br>2) Replace motor.<br>3) Replace 5757or IC8713 of main board.<br>4) Motor not well connected, replace. |
| 10<br>20<br>30<br>40<br>50<br>60<br>70 | Alarming       | 1) Coin selector damage or jammed, replace or clear.<br>2) Main board damage, back to professional fix.                        |

### 8. Tickets adjustment form of WANI-WANI

Tickets adjustment form of WANI-WANI

|                             |
|-----------------------------|
| LED Board<br>DIP<br>1234567 |
|-----------------------------|

|                         | 1   | 2   | 3   | 4   | 5   | 6 | 7 | 8 |
|-------------------------|-----|-----|-----|-----|-----|---|---|---|
| 3 points/ticket         | OFF | OFF | OFF | OFF |     |   |   |   |
| 5 points/ticket         | ON  | OFF | OFF | OFF |     |   |   |   |
| 10 points/ticket        | OFF | ON  | OFF | OFF |     |   |   |   |
| 15 points/ticket        | OFF | OFF | ON  | OFF |     |   |   |   |
| 20 points/ticket        | OFF | OFF | OFF | ON  |     |   |   |   |
| Imported ticket counter |     |     |     |     | OFF |   |   |   |
| Homemade ticket counter |     |     |     |     | ON  |   |   |   |

### 9. DIP OF MAIN BOARD

**RM052 WANI-WANI**

|                | 1   | 2   | 3   | 4  | 5  | 6  |
|----------------|-----|-----|-----|----|----|----|
| 1coin/ time    | ON  | ON  | ON  | ON |    | ON |
| 1coin/ 2 times | OFF | ON  | ON  | ON |    | ON |
| 1coin/ 3 times | ON  | OFF | ON  | ON |    | ON |
| 2 coins/1time  | OFF | OFF | ON  | ON |    | ON |
| 2coins/3times  | ON  | ON  | OFF | ON |    | ON |
| 3coins/1time   | OFF | ON  | OFF | ON |    | ON |
| 3coins/2times  | ON  | OFF | OFF | ON |    | ON |
| Free game      | OFF | OFF | OFF | ON |    | ON |
| Music demo     |     |     |     | ON | ON | ON |
| No music demo  |     |     |     | ON |    | ON |

Note: We have the right to improve our products but not notify users.