


TR414/TR616 INSTRUCTIONS

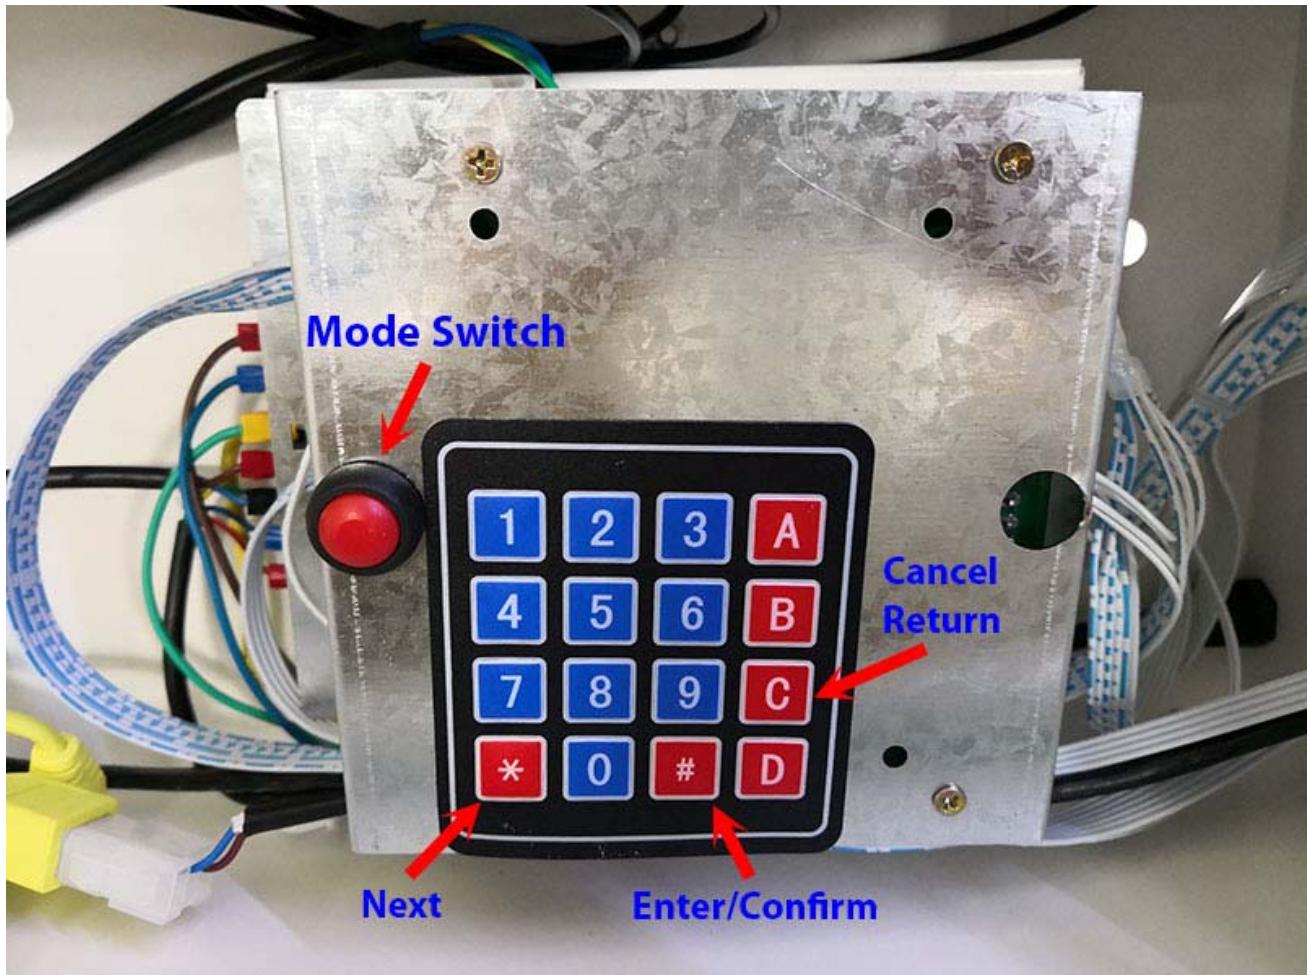

1. Sales Mode

- 1) Unwrap the machine and install the accessories when needed.
- 2) Close the door and power on, the machine will do self-check automatically. If everything is fine, the machine will turn to Sales Mode.

2. Maintenance Mode (Setting Mode)

- 1) Open the door, a beep sound will be given and LCD prompts “door is open”
- 2) Press the red “Mode Switch” button, then press # to enter into Setting Mode.
- 3) Close the door, and the machine will go back to Sales Mode.

Operating Instructions

Chinese and English

User model Display instructions

#	LCD display (ENGLISH)	Instruction
1	HAVE A GOOD DAY! 20**/**/** **:**	找零充足并且机器正常时的待机显示 This information will shown on LCD when the machine is on standby without an error.
2	PLEASE INSERT EXACT MONEY 20**/**/** **:**	找零不足并且机器正常时的待机显示 Machine works, but short of change.
3	“WELCOME”和“FREE VEND”切屏 20**/**/** **:**	开启免费销售功能并且机器正常时的待机 Machine works in Free Vending mode
4	CALL SERVICE TEL:	机器异常，不支持销售时的待机显示 Machine is Out of Service
5	PLEASE INSERT EXACT MONEY	投币(通常是纸币)后，因找零不足，退币后的提醒显示 Usually after inserting a big value bill when the machine doesn't have sufficient change.
6	PLEASE INSERT MORE MONEY	所投金额小于所选货道价格是的提醒显示 Money inserted less than the product's price
7	MAKE ALTERNATE SELECTION	选择的货道不支持出货，或者出货失败后的提醒显示 The selection is out of stock or fails to dispense product
8	SEL: CREDIT:	选择的货道号，所选货道商品价格以及投入的金额信息显示 The Column Selected, and The Amount Inserted
9	THANK YOU	完成一次商品售卖后的显示 After one successful vending
10	CHANGE:	完成售卖后显示的找零信息 Change information after vending
	开门自检的相关信息显示 After door open, machine executes self-checking	
11	Warning: The Door Is Open	开门瞬间显示，伴随3秒左右的蜂鸣警告 Displayed once door is open, along with a 3-second warning beep
12	Warning: ** TIMEOUT ** NULL ** CUR HIGH ** LOST ** OK	警告结束后会对货道电机状态进行更新，对之前报错的电机进行复位。第二行显示的即为电机的货道号及相应状态 After warning beep, the machine will report motor status and try resetting the faulty motors. Selection Number and Error Messages will be displayed.

	<p style="text-align: center;">服务模式下的相关信息显示及操作说明 Related information in service mode and operation instructions</p> <p>必须通过按下主板上的模式按钮，并#确认后才可以进入，门关上即可退出 Must press the red "Mode Switch" button , and press # keyboard to confirm. Close door to exit.</p>	
	#SERVICE MODE# PLS PRESS ENTER	<p>按下主板上的服务按钮后的显示，通过键盘上的#键即可进入服务菜单1显示 When "the door is open", Press the red "MODE" button to enter Maintance interface. and Press "*" to switch to main menu 1</p>
1	FILL COINS CASH *** . ** CHANGE *** . **	<p>硬币器装填硬币操作菜单，可显示投入的金额和可用来找零的金额（切屏显示）。按*键可进入下一菜单2显示 Coin changer refilling menu: it shows the total coin amount inserted and the amount available for change. and Press "*" to switch to main menu 2</p>
2	SET PRICE SEL ** 000.00	<p>价格设置菜单，按#进入设置界面，通过数字键选择货道号，再按#进入价格重设，数字输入对应价格（*键可右移光标）并按#确认，按C取消价格设置。再按C可退出价格设置菜单，按*键可进入下一菜单3显示 PRICE setting menu, Press "#" to enter, and input the number of selection, then press "#" to set the price. Input the right price (press * to move cursor) and press "#" to confirm it. Press"C" to cancel. and Press "*" to shift to main menu 3</p>
3	FILL FIXED QTT # LOADING..... FINISHED!	<p>一键补货选项，按#键执行一键补货操作（将库存的数量补满满即将设置的容量数量复制到库存内）。按*键可进入下一菜单4显示 Reset Inventory of ALL columns in Program after you have physically refill ALL the columns. Press "#" to fill up all selections (as per the capacity of each column you previously set in the "SET CAPACITY" menu) and Press "*" to switch to main menu 4</p>
4	SET INVENTORY SEL ** 000.00	<p>库存设置菜单，按#进入设置界面，通过数字键选择货道号，再按#进入库存重设，数字输入对应库存（*键可右移光标）并按#确认，按C取消库存设置。再按C可退出库存设置菜单，按*键可进入下一菜单5显示 SET INVENTORY of a CERTAIN column , Press "#" to enter, and input the number of selection, then press "#" to enter. Input the right stock quantity as per how many products you have actually loaded in this column (press * to move cursor) and press "#" to confirm it. Press"C" to cancel. and Press "*" to shift to main menu 5</p>

5	<p>SET CAPACITY</p> <hr/> <p>SEL ** 000.00</p>	<p>容量设置菜单，按#进入设置界面，通过数字键选择货道号，再按#进入容量重设，数字输入对应容量（*键可右移光标）并按#确认，按C取消容量设置。再按C可退出容量设置菜单，按*键可进入下一菜单6显示SET CAPACITY(IT IS FOR "FILL FIXED QTY")，Press "#" to come into set interface, and input the selection number, then press "#" to enter .Input the right capacity (input the capacity of selection (it's normally equal to the number of loops of the spring) and press "#" to confirm it. Press"C" to cancel. and Press "*" to shift to main menu 6</p>
6	<p>SINGLE SELECTION</p> <hr/> <p>ALL OK SELECT **</p> <p>** TESTING</p> <p>** OK</p> <p>** ERROR</p> <p>** NULL</p>	<p>单个电机测试菜单，数字键输入货道号，对应电机开始测试并显示相关信息。按*键可进入下一菜单7显示。</p> <p>Single motor testing menu. Input the selection number, and motor can tested and display related info. and Press "*" to shift to main menu 7</p>
7	<p>ALL SELECTION</p> <hr/> <p>** TESTING</p> <p>** OK</p> <p>** NULL</p> <p>** ERR!CONTINUE?</p> <p>ALL OK</p> <p>ALL NOLL</p>	<p>所有电机测试菜单，按#确认后，按顺序依次从11货道开始测试，并报相应状态，遇故障机会停住，如需继续坚持，按@开始重新检测电机，结束后显示所有电机检测结果（空缺不属于故障）。结束后，后需按C返回上一级菜单后，按*键可进入下一菜单8显示</p> <p>All motors testing menu. Press#" to confirm, and it will test from the first motor to the last one automatically, and display related info. and Press "*" to shift to main menu 8</p>
8	ACCOUNT	<p>销售统计的相关记录显示，按#进入子菜单8.1显示，按C可退出子菜单显示。按*键可进入下一个菜单9显示</p> <p>Sales statistics menu. it will display related info. And press#" to enter into sub-menu 8.1. and Press "*" to shift to main menu 9</p>
8.1	<p>HIST SALES</p> <hr/> <p>***** . **</p>	<p>控制板安装使用后的所有销售金额记录（不可清除）按*可进入下一菜单8.2显示。</p> <p>Total sales since machine initialization (can't be cleared) and Press "*" to shift to sub-menu 8.2</p>
8.2	<p>HIST COUNT</p> <hr/> <p>*****</p>	<p>控制板安装使用后的所有销售数量记录（不可清除）按*可进入下一菜单8.3显示。</p> <p>Total vends since machine initialization (can't be cleared) and Press "*" to shift to sub-menu 8.3</p>

8.3	RES SALES **** . **	控制板自上次复位后累计的所有销售金额记录（可清除）按* 可进入下一菜单8.4显示。 Total sales since the last clearing (can be cleared) and Press "*" to shift to sub-menu 8.4
8.4	RES COUNT *****	控制板自上次复位后累计的所有销售数量记录（可清除）按* 可进入下一菜单8.5显示。 Total vends since the last clearing (can be cleared) and Press "*" to shift to sub-menu 8.5
8.5	CARD SALES **** . **	控制板安装使用后的所有无现金销售记录（不可清除）按* 可进入下一菜单8.6显示。 Total cashless sales since machine initialization (cannot be cleared) and Press "*" to shift to sub-menu 8.6
8.6	RES CARD **** . **	控制板自上次复位后累计的所有无现金销售金额记录（可清除）按* 可进入下一菜单8.7显示。 Total cashless sales since the last clearing (can be cleared) and Press "*" to shift to sub-menu 8.7
8.7	SINGLE ACCOUNT SELECT ** SINGLE ACCOUNT [**] 00000	控制板安装使用后的所有单个货道德销售数量（可清除）按数字键选定需要查询的货道号后面试相应的销售数量。按*键可进入下一菜单8.8显示 Single selection sales since the last clearing (can be cleared) Press "1 to 8" to browse the sales quantity of each column and Press "*" to shift to sub-menu 8.8
8.8	CLEAR FINISH !	按#确认后将所有可清除的数据全部清空，完成后显示FINISH!按*键可轮回菜单8.1的显示 Press "#", It can clear all the sales information, and "finish!" will be displayed after the clearing is done. and Press "*" to shift to sub-menu 8.8
9	OPTIONS PUSH[#]	机器相关功能参数设置菜单，按#进入子菜单9.1显示。按C可退出子菜单显示。按*键可轮回菜单1显示 OPTIONS menu, press "#" to enter into sub-menu 9.1, and Press "*" to shift to sub-menu 1
9.1	FORCE VEND OFF/ON	强制销售功能菜单，按#进入，按*切换模式，再按#确认返回（按C取消设置并返回）。按*键可进入下一个菜单9.2的显示 Force vending function menu, Press "#" to enter, press "*" to switch model, press "#" to confirm (Press "C" to cancel and return) and Press "*" to shift to sub-menu 9.2

9.2	MULTI VEND OFF/ON	多次销售功能菜单，按#进入，按*切换模式，再按#确认返回（按C取消设置并返回）。按*键可进入下一个菜单9.3的显示 Multi vending menu, Press#" to enter, press "*" to switch model, press#" to confirm(Press"C" to cancel and return) and Press "*" to shift to sub-menu 9.3
9.3	VEND TEST OFF/ON	销售测试功能菜单，按#进入，按*切换模式，再按#确认返回（按C取消设置并返回）。按*键可进入下一个菜单9.4的显示 Vend testing function menu, Press#" to enter, press "*" to switch model, press#" to confirm(Press"C" to cancel and return) and Press "*" to shift to sub-menu 9.4
9.4	FREE VEND OFF/ON	免费销售功能菜单，按#进入，按*切换模式，再按#确认返回（按C取消设置并返回）。按*键可进入下一个菜单9.5的显示 Free vending menu, Press#" to enter, press "*" to switch model, press#" to confirm(Press"C" to cancel and return) and Press "*" to shift to sub-menu 9.5
9.5	BILL ESCROW OFF/ON	退纸币功能菜单，按#进入，按*切换模式，再按#确认返回（按C取消设置并返回）。按*键可进入下一个菜单9.6的显示 Bill Escrow menu, Press#" to enter, press "*" to switch model, press#" to confirm(Press"C" to cancel and return) and Press "*" to shift to sub-menu 9.6
9.6	SALES RECORD <hr/> CREDIT 000.00 CARD ***.** CHANGE ***.** SELECTION **	最后一次成功销售的相关记录信息显示，包括投入的现金和无现金的金额，找零的金额，及选择的货到号（切屏显示）按*键可进入下一菜单9.7的显示。 Sales details of the last sucessful transaction, including cash inserted or cashless amount, change paid out and the selection number (shift to display) and Press "*" to shift to sub-menu 9.7
9.7	DATE/TIME 2000/1/1 0:00	系统时间日期的设定菜单，按#进入，数字键输入，按*可右移光标，再按#确认返回（按C取消设置并返回）。按*键可进入下一菜单9.8的显示。 System time setting menu, Press#" to enter, Press number key to set, press "*" to move cursor, press#" to confirm (Press"C" to cancel and return). Press "*" to shift to sub-menu 9.8
9.8	MACHINE INFO	机器的相关信息显示菜单，按#进入子菜单9.8.1显示，按C可退出子菜单显示。按*键可进入下一菜单9.9的显示 MACHINE INFORMATION menu. Press "*" to shift to sub-menu 9.8.1

9.8.1	MACHINE SERIAL VCM	机器的序列号显示，按#进入，数字键输入，再按#确认返回（按C取消设置并返回）。按*键可进入下一菜单9.8.2的显示
9.8.2	MACHINE MODEL VCM	机器的型号显示，按#进入，数字键输入，再按#确认返回（按C取消设置并返回）。按*键可进入下一菜单9.8.3的显示
9.8.3	SOFTWARE VER VMC	机器的软件版本号显示，不支持修改。按*可轮回菜单9.8.1的显示
9.9	SERVICE TEL:	服务电话输入菜单，按#进入，数字键输入，再按#确认返回（按C取消设置并返回）。按*键可进入下一菜单9.10的显示。Set Service Phone Number.
9.10	DIAGNOSE ----- CHANGER 3 VALIDATOR 7 READER 8 FINISHED !	故障诊断菜单，按#开始诊断，显示外围设备状态，可查询说明书确认。结束时显示FINISHED!按*键可轮回菜单9.1的显示。Press # to run diagnostics, the status of bill validator, coin changer and card reader will be reported.